


Cabin Access Points

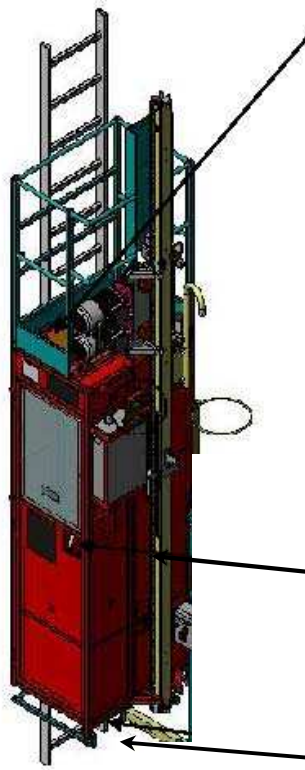

Top Cabin Access

3 Access Doors Available:

- Main Door:
 - This door is electromechanically locked when the hoist is in motion
- Dual Emergency exit doors:
 - These doors are electromechanically monitored when the cabin is in operation. Hoist will not activate if top or bottom door is open.
 - Cabin will not run if any one of the doors is not closed and locked.
- Contains a fixed internal ladder for exiting to top of the car.

Main Cabin Door is Securely Lock when car is in motion

Bottom Cabin Access Door

Emergency Descent Procedure (As easy as 1, 2 ,3,)

1. Open the top door
2. Go up the internal ladder to access the roof
3. Pull the brake release handle allowing for manual descent of the cabin